


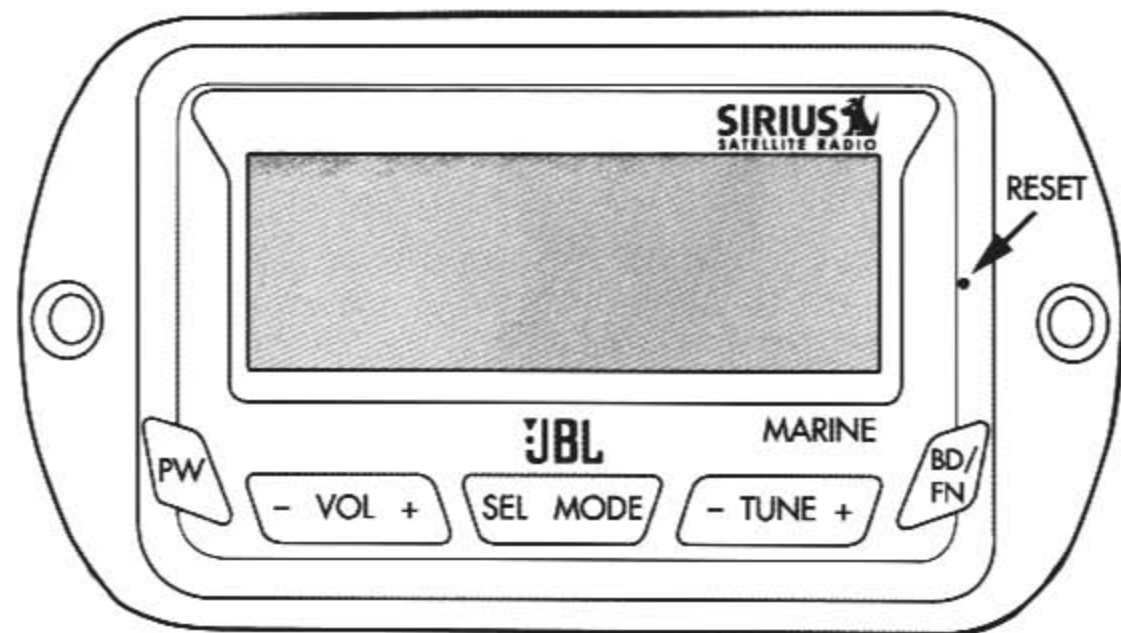

JBL REM35

Operation Manual



Prospec Electronics

3325 S. Morgans Point Rd • Mt. Pleasant, SC 29466

Tel: 843-849-9037 • Fax: 843-849-9054

OPERATION OF REMOTE TOUCH PAD

- PW** – Turns radio/CD on and off
- VOL+** – Turns volume, bass, treble, balance or fader up. Also use to switch between options for Beep 2nd, I-Vol, Area and DSP.
- VOL-** – Turns volume, bass, treble, balance or fader down. Also use to switch between options for Beep 2nd, I-Vol, Area and DSP.
- SEL** – Selects between volume, bass, treble, balance, fader. Press button for over 1.5 seconds to go to Beep 2nd, I-Vol, Area and DSP selection. In SIRIUS mode only, “CODE_ _ _ _” comes up, but it can only be set at the radio itself.

Beep 2nd: Control Beep on (hear “beep” when you press any button) or Beep 2nd (hear “beep” only when a button is pressed for over 1.5 seconds) by using +/- volume buttons to switch between options.

I-Vol: Initial Volume Level Adjustment allows you to set your preferred volume level using +/- volume buttons. After setting your preferred volume level, the radio will automatically be set to that level every time the unit is turned on.

Area Selection: Use +/- volume buttons to choose between USA or EUR (Europe). Press and hold BD/FN for 1.5 seconds to select format.

DSP: Choose between flat, classic, pop, or rock using +/- volume buttons.

- MODE** – Selects AM/FM, CD, SIRIUS, Aux. In SIRIUS mode only, “Channel – – –” will appear, but it can only be set at the radio itself.

- Tune-** – Tunes radio and satellite channels down or CD tracks down. Press quickly to activate seek mode (automatically seeks up to the next strong station). Press and hold the button for 2 seconds to enter manual tuning mode. The unit will revert to seek mode after 10 seconds without use.
- Tune+** – Tunes radio and satellite channels up or CD tracks up. Press quickly to activate seek mode (automatically seeks down to the next strong station). Press and hold the button for 2 seconds to enter manual tuning mode. The unit will revert to seek mode after 10 seconds without use.
- BD/FN** – A momentary push changes between FM1, FM2, FM3, AM1 or AM2. When in SIRIUS mode, a momentary push changes between SIRIUS1 and SIRIUS2. Push for more than 2 seconds to change from direct to category mode.
- RESET** – In the unlikely event that the system experiences a power spike and the remote locks up (similar to a computer), push the reset button with a paper clip or a similar blunt, small-diameter object. The reset is the small, round hole located on the right side of the display’s plastic frame in the middle.



This product is sold and serviced exclusively by Prospec Electronics, Inc., and must be returned to Prospec for in and out of warranty repairs. It cannot be serviced under warranty by other JBL service centers. All products sold and serviced exclusively by Prospec Electronics, Inc.

For service, contact us:

3325 S. Morgans Point RD • Mt. Pleasant, SC 29466
Tel: 843-849-9037 • Fax: 843-849-9054 • www.prospecelectronics.com